


Seat Mounting Guide

v 18.1

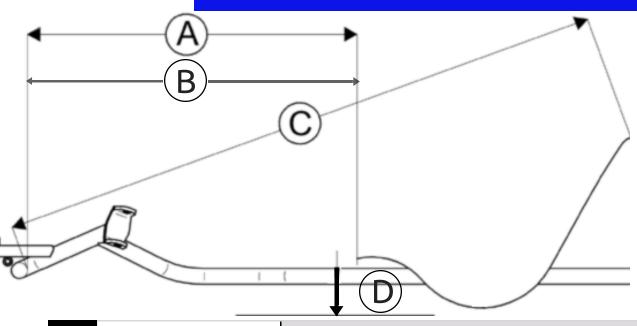

	Model	Measurement			
		Α	В	С	D
	Covert 3.0 X30	63.5	63	124.5-126	-0.5
	Covert 3.0 OK	64.5	64	126-127	-0.5
	Covert 3.0 KZ	64.5	64	126-127	0
	Covert 3.0 DD2	64.5	64	126-127	0
	4R	62.5	62	124-125	-0.5
	Ranger 28	52.5	52	/	0

If you are a shorter driver you can shorten measurements A&B. In most instances these are great starting points. All Seats are meant to be mounted 'flat' with the bottom of the seat thus parallel with the frame.



7 J3 COMPETITION 2 I 54 NORCROSS ROAD ERIE PENNSYLVANIA USA 165 I O + I .8 I 4.864. I 846